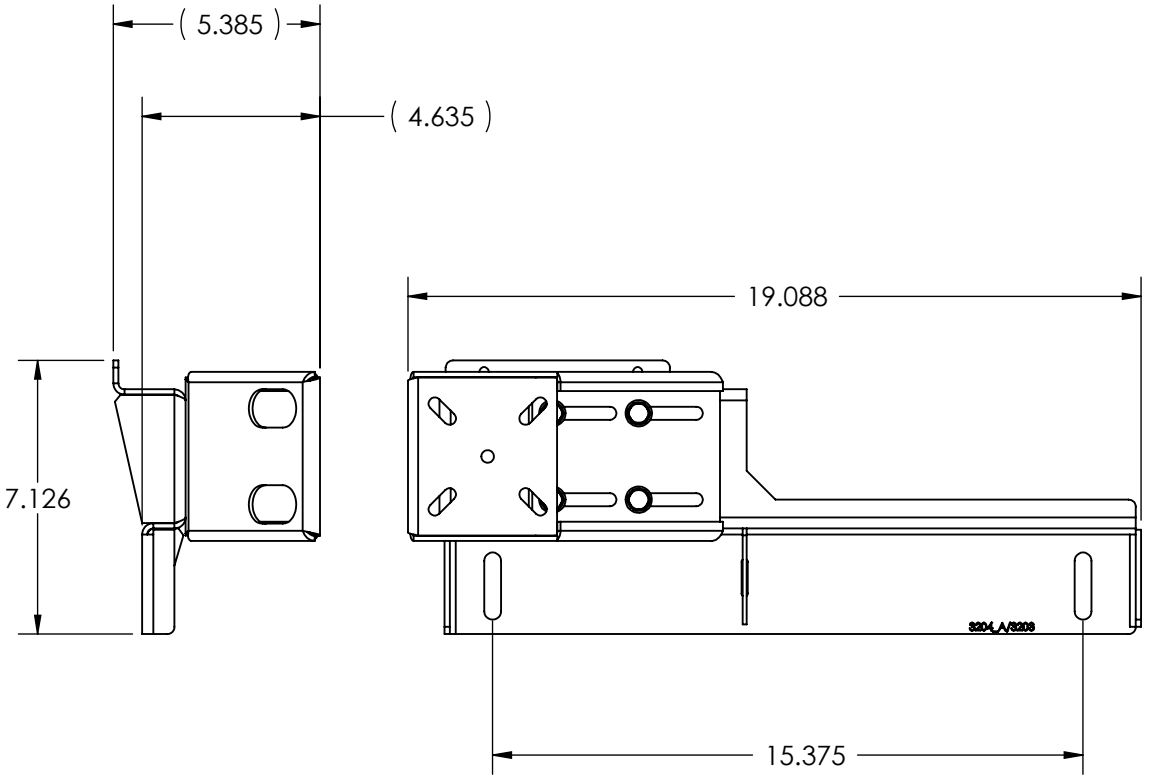

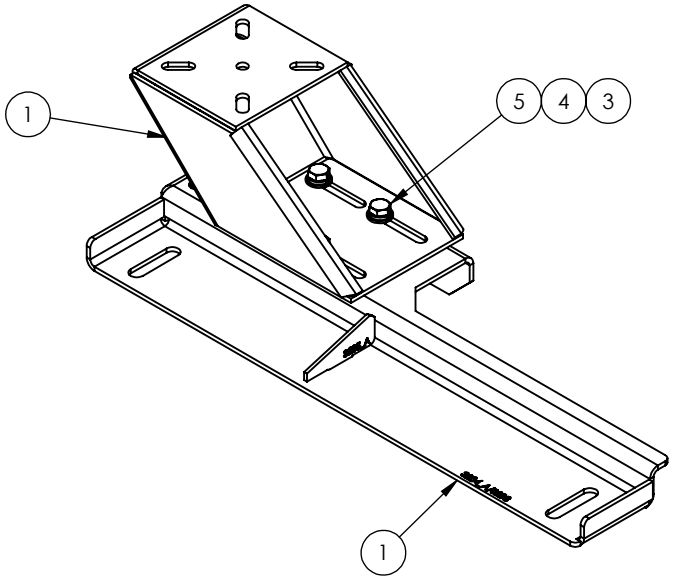

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	10-002400	45° 3.5" LOWER OFFSET BASE W/SLOTS
2	1	30-003203	HDM BASE, CROWN VIC
3	4	GSM31006	FLAT WASHER, 5/16"
4	4	GSM31027	LOCK WASHER, 5/16"
5	4	GSM33011	SCREW, 5/16-18 X 3/4"

INSTALLATION INSTRUCTIONS

1. REMOVE PASSENGER SIDE FRONT SEAT BOLTS.
2. SLIDE BASE PLATE IN BETWEEN FLOOR AND SEAT BRACKETS.
3. REINSTALL OEM SEAT BOLTS AND TIGHTEN TO VEHICLE MANUFACTURER'S TORQUE SPECIFICATION.
4. ATTACH LOWER OFFSET TO BASEPLATE WITH 5/16" BOLTS, LOCK WASHERS AND FLAT WASHERS ANGLE TOWARDS CENTER OF VEHICLE.
5. FOLLOW GENERAL INSTRUCTIONS FOR POLE AND UPPER MOUNT PARTS.

HAVIS HAVIS, INC.
75 JACKSONVILLE RD.
WARMINSTER, PA. 18974
1-800-524-9900

TITLE: 95-11 CROWN VIC HDM BASE ASSEMBLY

DO NOT SCALE DRAWING

SIZE	DWG. NO.	REV
A	C-HDM-101-INST	B

WEIGHT (LB): 7.82	SCALE: 1:8	SHEET 1 OF 1